

Programming of your Top And Bottom Limits

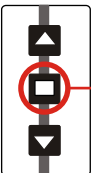
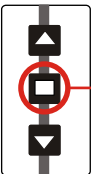
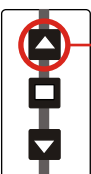
Important:

Please make sure that each blind has its own switched power feed and the blinds are switched to the OFF position before proceeding to the instruction below...


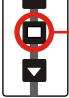


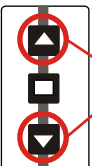
Please note: Your blinds have been programmed to the appropriate channel according to your instructions

STEP 1

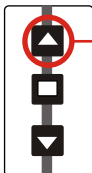
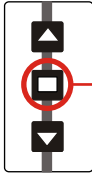
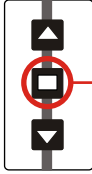
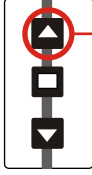
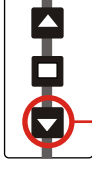
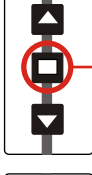
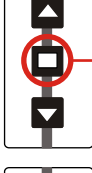
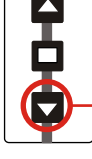
1. Turn ON the blind you wish to reset the limits

- 1a  Press and hold STOP Button until you hear a beep (approx 5 seconds)
- 1b  Release STOP Button – Then Press STOP Button again for 5 more seconds until you hear 4 short beeps.
- 1c  Press UP Key , until you hear 5 beeps. This indicates that the blind has **NO** TOP or BOTTOM limits and control will be momentary
- Control will be Momentary until STEP 2 has been programmed

Programming a Intermediate Position

-  Using The Buttons Up, Stop And Down, Take Your Blind to the Intermediate position that you wish to program.
-  Press and hold STOP Button (approx 5 seconds) until you hear a beep
-  Release STOP Button – Then Press STOP Button again for 5 more seconds until you hear 4 short beeps.
-  Press and Hold the UP And DOWN button until 3 beeps, This will indicate that the Intermediate position has been successfully programmed
-  Press and Hold the UP And DOWN button to activate the intermediate position memorised

STEP 2

- 2a  Press and Hold the UP button until the desired TOP position is reached. (You may need to use the DOWN key to travel DOWN a touch then the UP key again to achieve your desired TOP position)
- 2b  Press and hold STOP Button (approx 5 seconds) until you hear a beep
- 2c  Release STOP Button – Then Press STOP Button again for 5 more seconds until you hear 4 short beeps.
- 2d  Press and Hold the UP button until 3 beeps and a brief movement of the blind will indicate that the TOP position has been successfully programmed
- 2e  Press and Hold the DOWN button until the desired BOTTOM position is reached. (You may need to use the UP key to travel UP a touch then the DOWN key again to achieve your desired BOTTOM position)
- 2f  Press and hold STOP Button (approx 5 seconds) until you hear a beep
- 2g  Release STOP Button – Then Press STOP Button again for 5 more seconds until you hear 4 short beeps.
- 2h  Press and Hold the DOWN button until 3 beeps and a brief movement of the blind will indicate that the BOTTOM position has been successfully programmed

YOUR BLIND IS NOW READY FOR USE